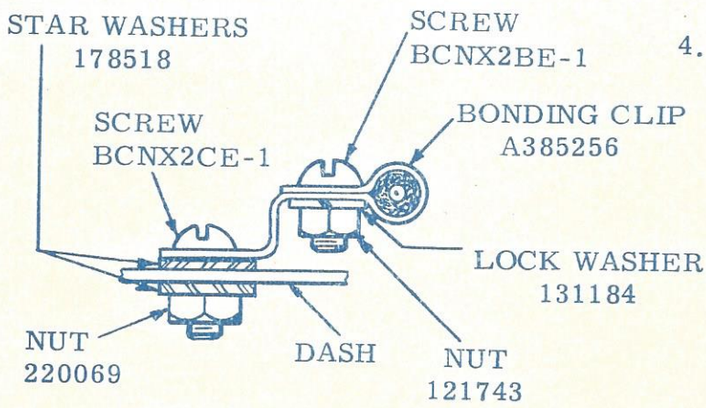


FIGURE 7

4. Clean Surface of tachometer cable housing at "F", Figure 1 and install bonding clip Part A385256 according to detail Figure 7. Using one screw Part #BCNX2BE-1, one screw Part #BCNX2CE-1, one nut Part #220069, one nut Part #121743, one lock washer Part #131184 and two star washers Part #178518.

5. Repeat (4) for the speedometer cable at "G", Figure 1 using the same parts.

6. Bond the hand throttle control, choke control, left ventilator control and the heat indicator tube to the dash in a similar manner. See Figure 1 at "H". Use four bonding clips Part #A385277, eight star washers #178518, four screws Part #BCNX2CE-1, four screws Part #BCNX2BE-1, four lock washers Part #131184, four nuts Part #220069 and four nuts Part #121743.

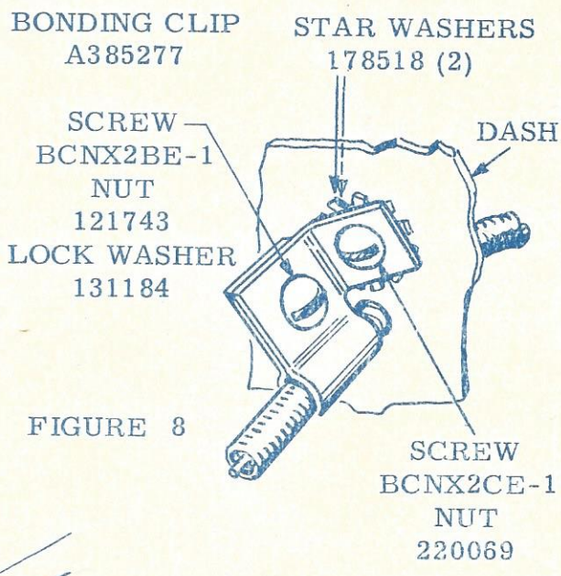


FIGURE 8

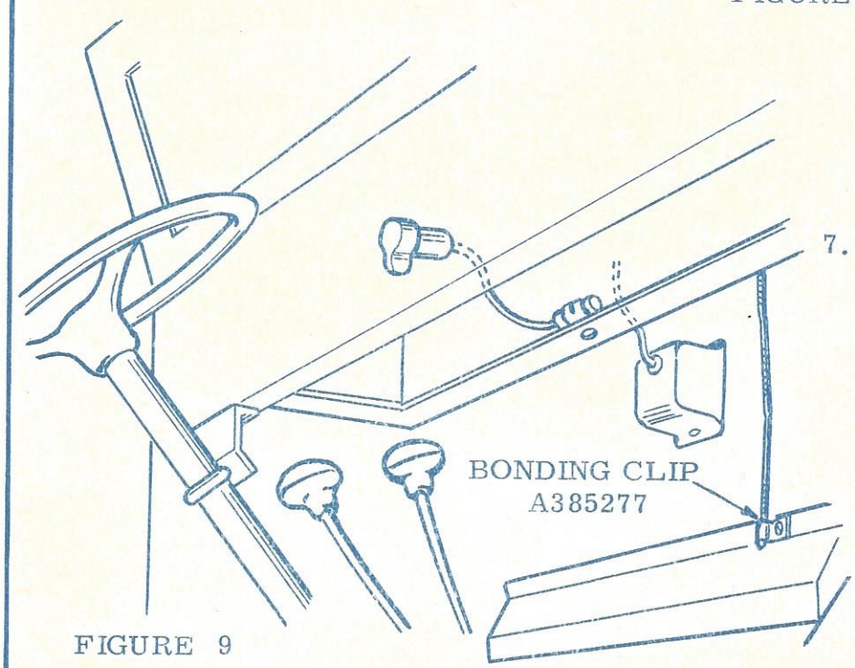


FIGURE 9

7. Bond right ventilator control wire inside body at the toe board using one bonding clip Part #A385277, two star washers Part #178518, one screw Part #BCNX2CE-1, one screw Part #BCNX2BE-1, one lock washer #131184 one nut Part #220069 and one nut Part #121743. See Figure 9.

Supersedes Ordnance Tracing A5700025, 5 April 1944, Rev. B, 5-25-44

CONTROL DRAWING-OCO-D H. T. V. Engr. Sub-Office Ardmore, Pa.	Approved Fred C. Adams 1st Lt., Ord. Dept. 9-22-44 Officer-in-Charge	Drwg. Size A5700025 Sheet 7 of 9

CLARK CABLE CORP. CLEVELAND, OHIO	Drwg. No. 2873-7 Date 1-30-52	Traced By I.R.I. Ck'd By S.S.

REV. C, 9-22-44 F.C.A.